



Polaroid P3500S Factory Reset Guide


1. Turn your printer on. Go to **Control Panel > Devices and Printers**. Right-click on **XPS Card Printer** and select **Printer Properties**.

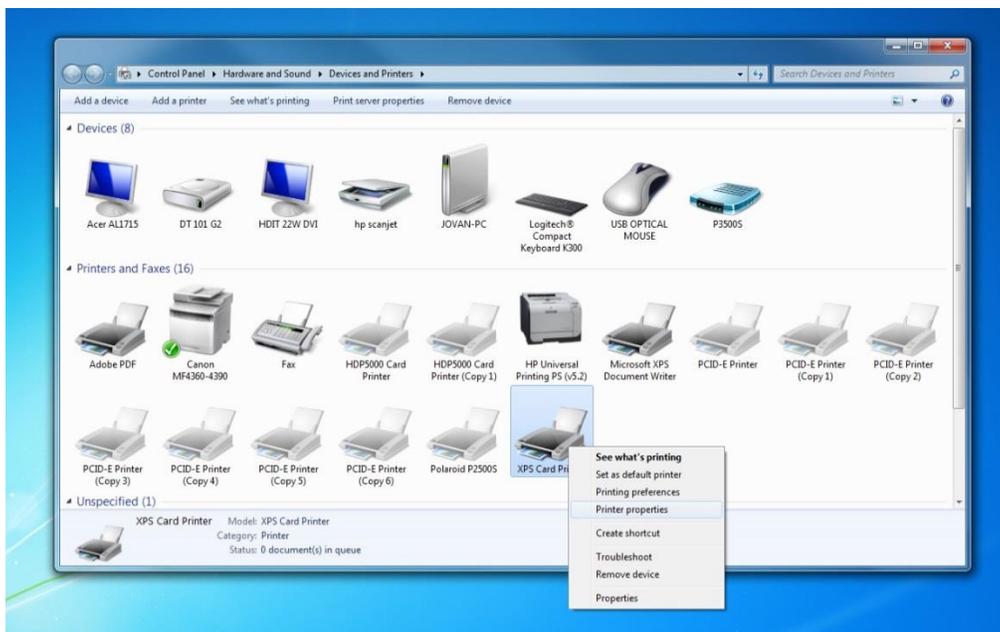

2. Click on the **Printer Status** tab. Then click **Configure Printer**

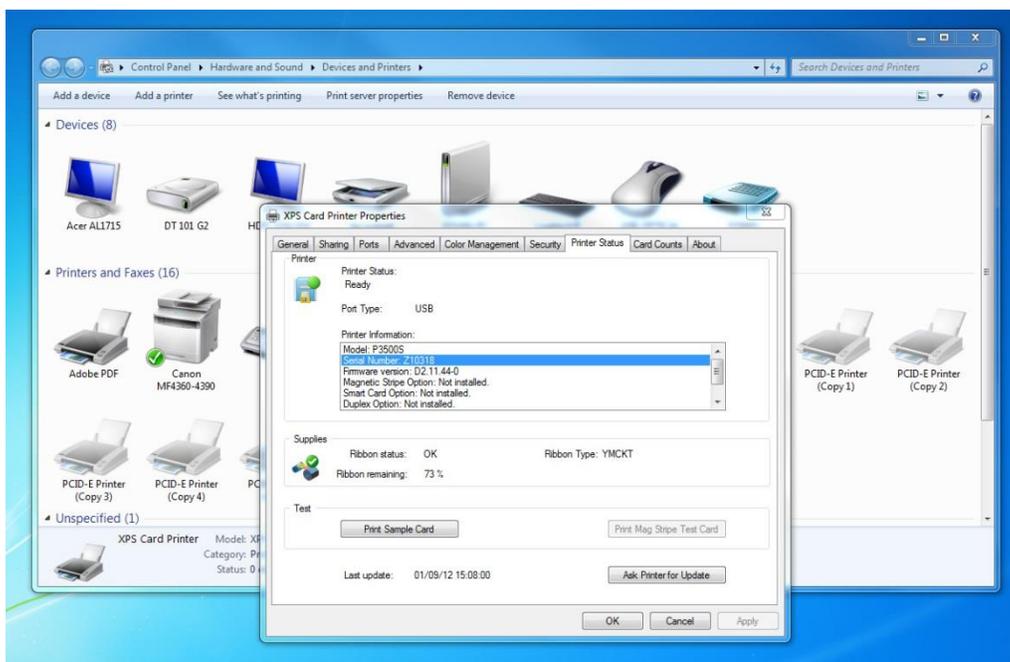


- Choose “WebService” as your username and then enter “926918” as your password.
Note: If you do not have this screen, you may need to click LOGOUT first.

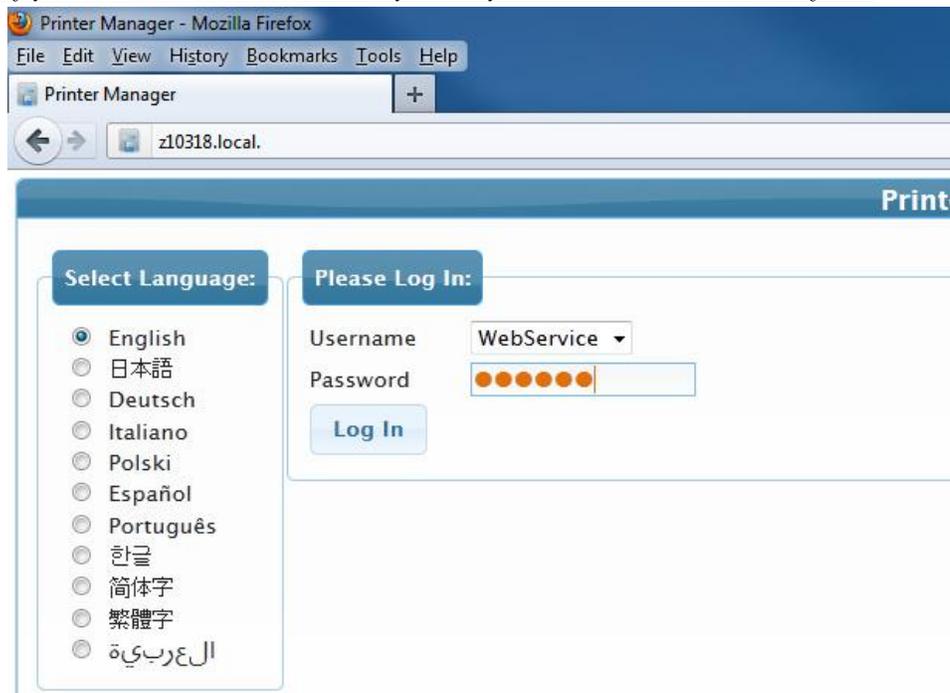

Go to **Printer Setting > Print**.

Scroll all the way to the bottom and click **Restore Default**. Then click **Set Current**.

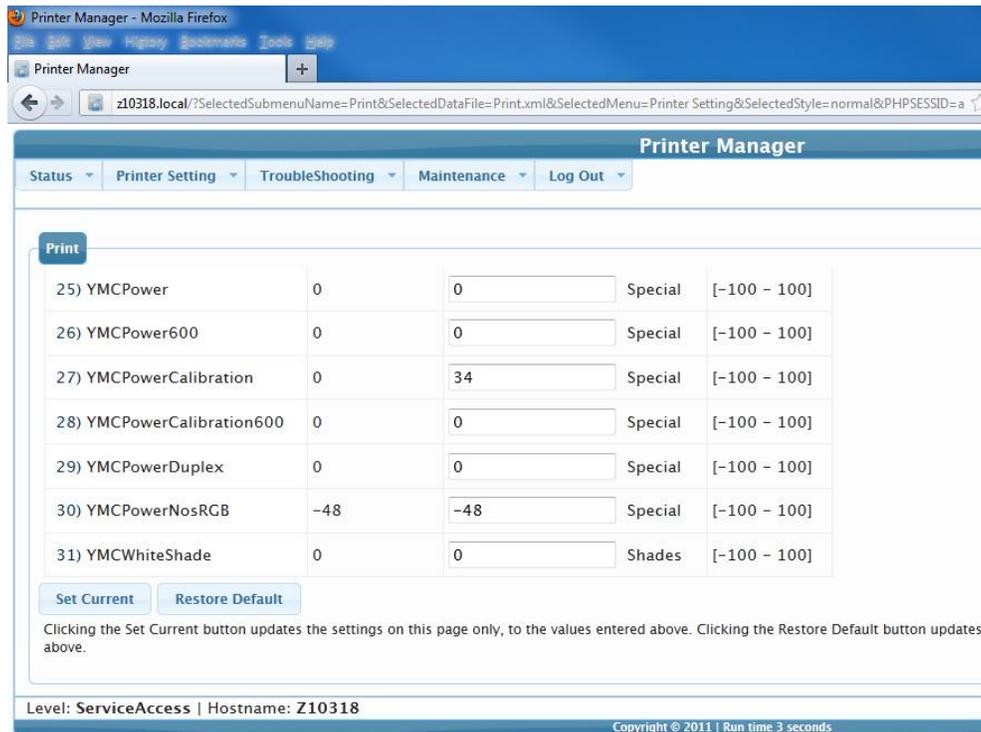

- Your printer has now been reset to factory default settings!