



Polaroid P3500S Lead and Tail Trim Guide


1. Turn your printer on. Go to **Start > Devices and Printers**. Right-click on **XPS Card Printer** and select **Printer Properties**.

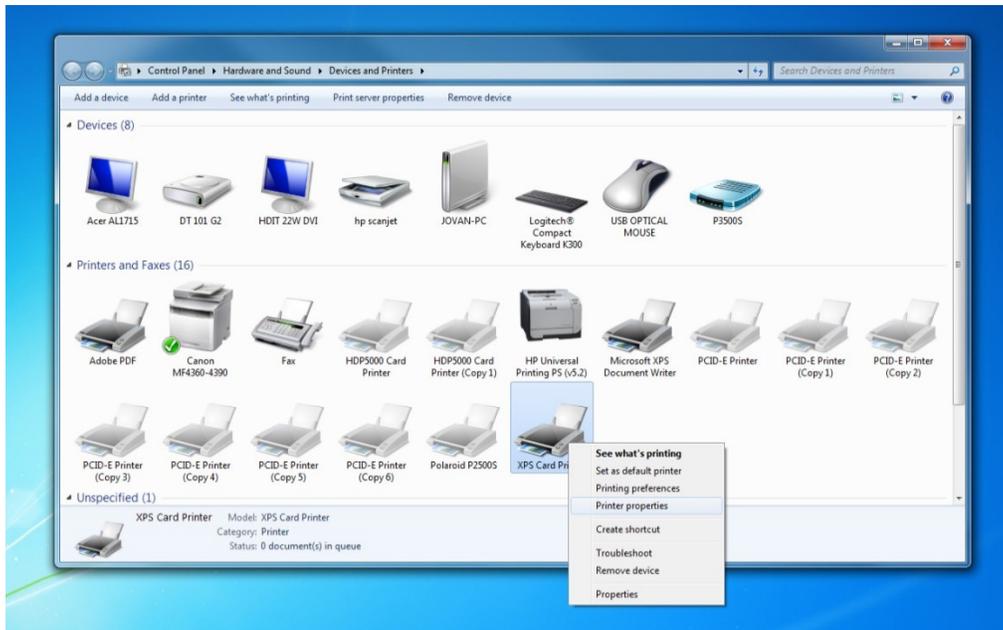


2. Click on the **Printer Status** tab. Then click **Configure Printer**

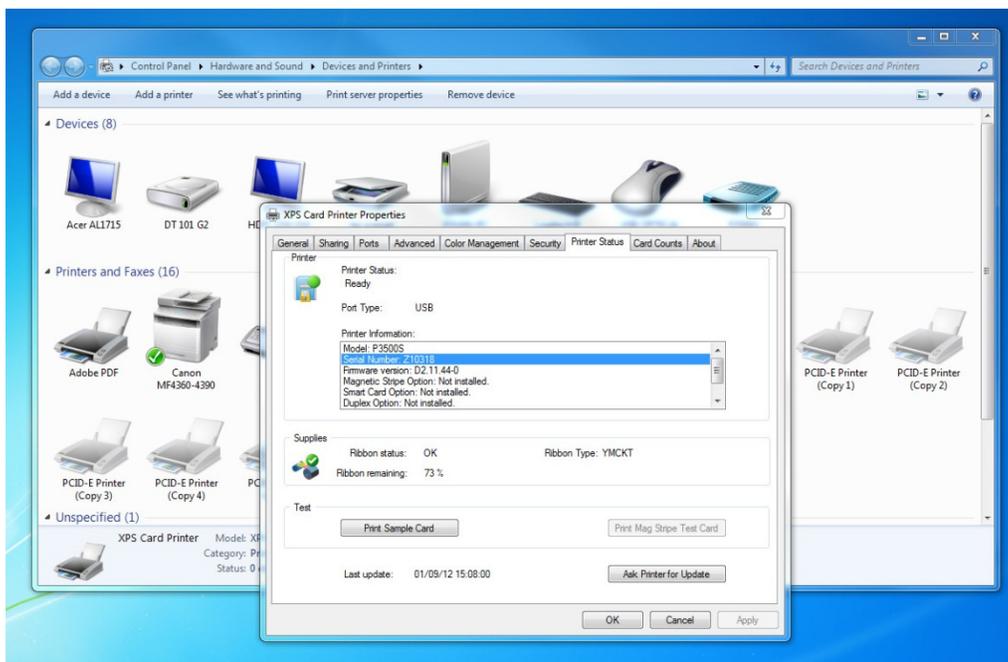

- Choose “WebService” as your username and then enter “926918” as your password.

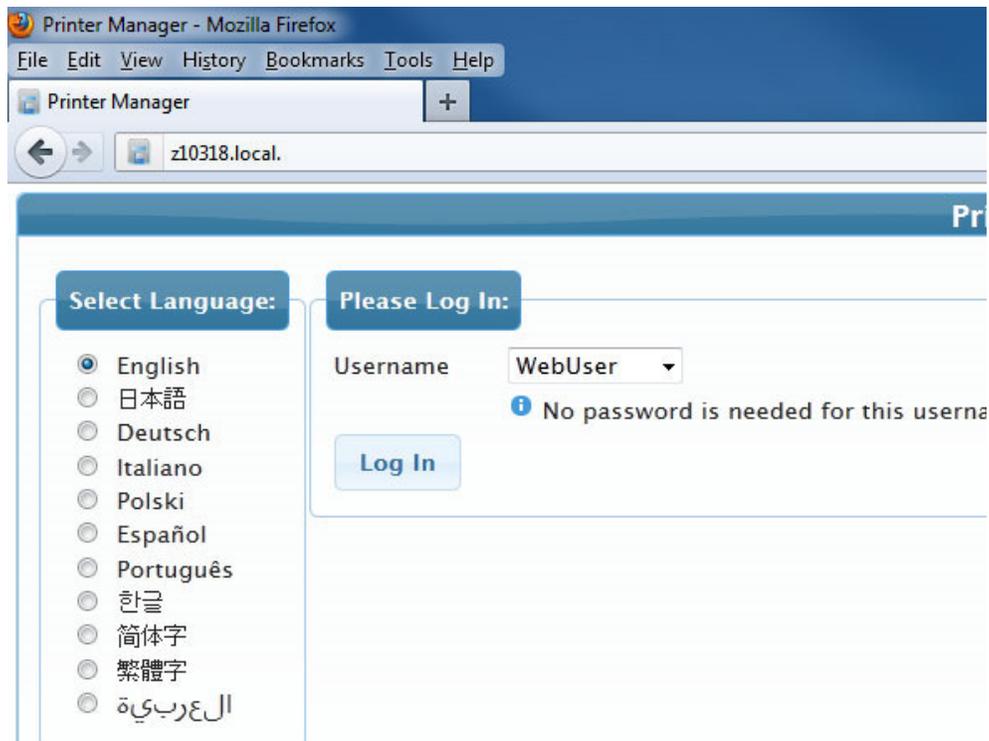

- Go to **Printer Setting > Print**. Set the “LeadTrim” a lower number than what is shown and the “TrailTrim” to a lower number (min 0).

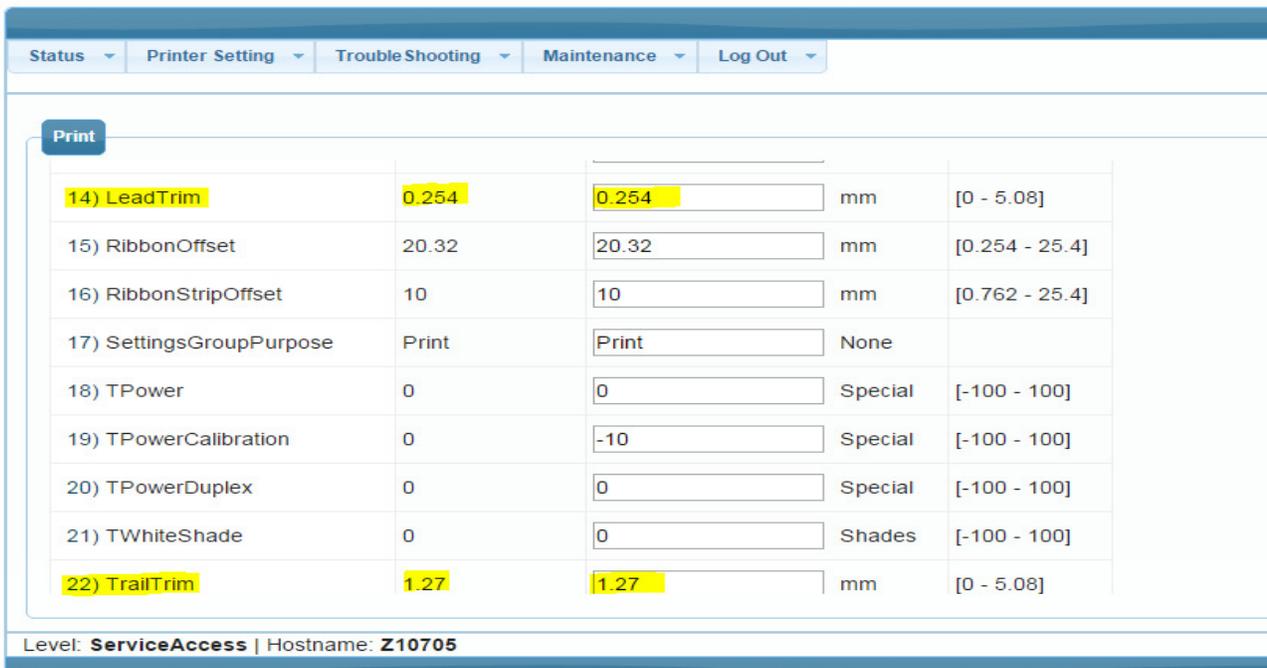

Scroll down to the bottom of the window. Click on **Set Current**.

ID	Name	Value	Input Field	Type	Range
25)	YMCPower	0	<input type="text" value="0"/>	Special	[-100 - 100]
26)	YMCPower600	0	<input type="text" value="0"/>	Special	[-100 - 100]
27)	YMCPowerCalibration	0	<input type="text" value="34"/>	Special	[-100 - 100]
28)	YMCPowerCalibration600	0	<input type="text" value="0"/>	Special	[-100 - 100]
29)	YMCPowerDuplex	0	<input type="text" value="0"/>	Special	[-100 - 100]
30)	YMCPowerNosRGB	-48	<input type="text" value="-48"/>	Special	[-100 - 100]
31)	YMCWhiteShade	0	<input type="text" value="0"/>	Shades	[-100 - 100]

[Set Current](#) [Restore Default](#)

Clicking the Set Current button updates the settings on this page only, to the values entered above. Clicking the Restore Default button updates above.

Level: ServiceAccess | Hostname: Z10318

Copyright © 2011 | Run time 3 seconds

5. You may need to repeats step 5 & 6 until you achieve the desired outcome.