



Polaroid P3500S CR79 Setup Guide


1. Turn your printer on. Go to **Start > Devices and Printers**. Right-click on **XPS Card Printer** and select **Printer Properties**.

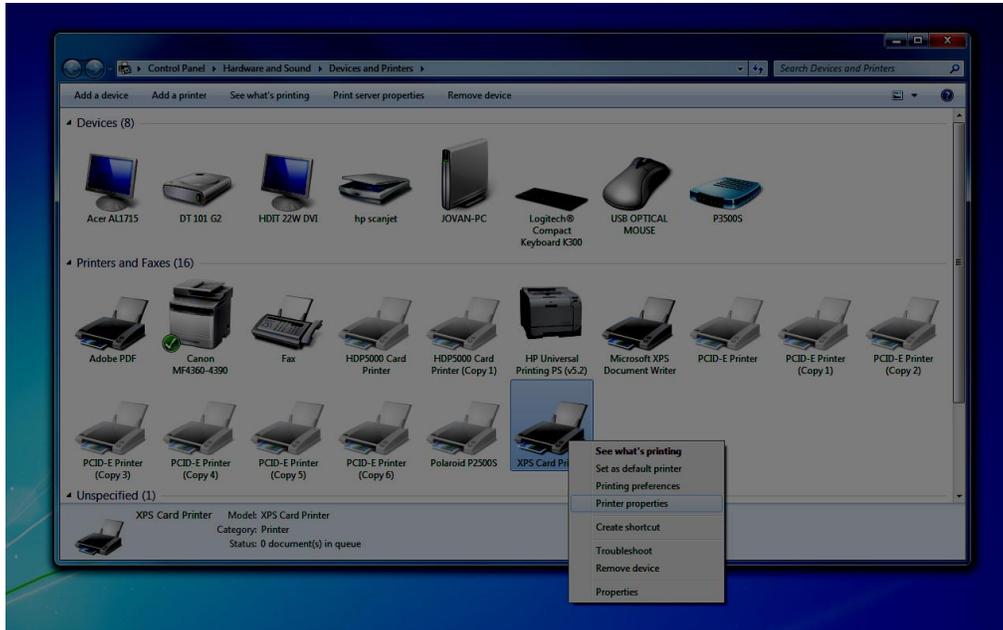


2. Click on the **Printer Status** tab. Then click on **Configure Printer**.

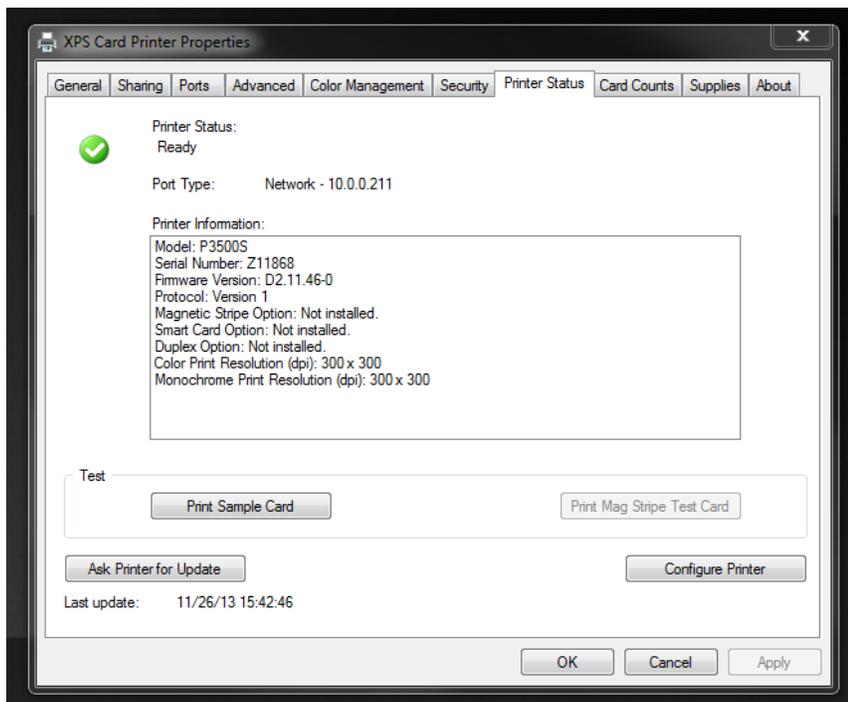


3. Choose “WebService” as your username and then enter “926918” as your password.

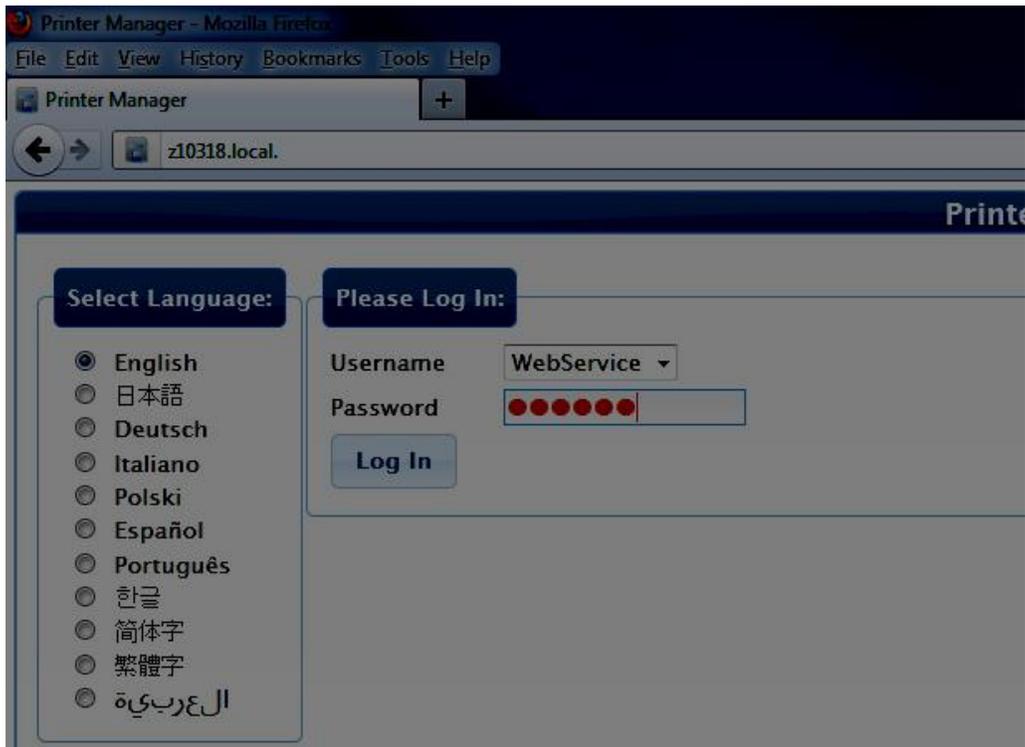

4. Go to **Printer Setting > Print**. Set the “Current Value” to “1” under “CardRegistration” (line item 2).

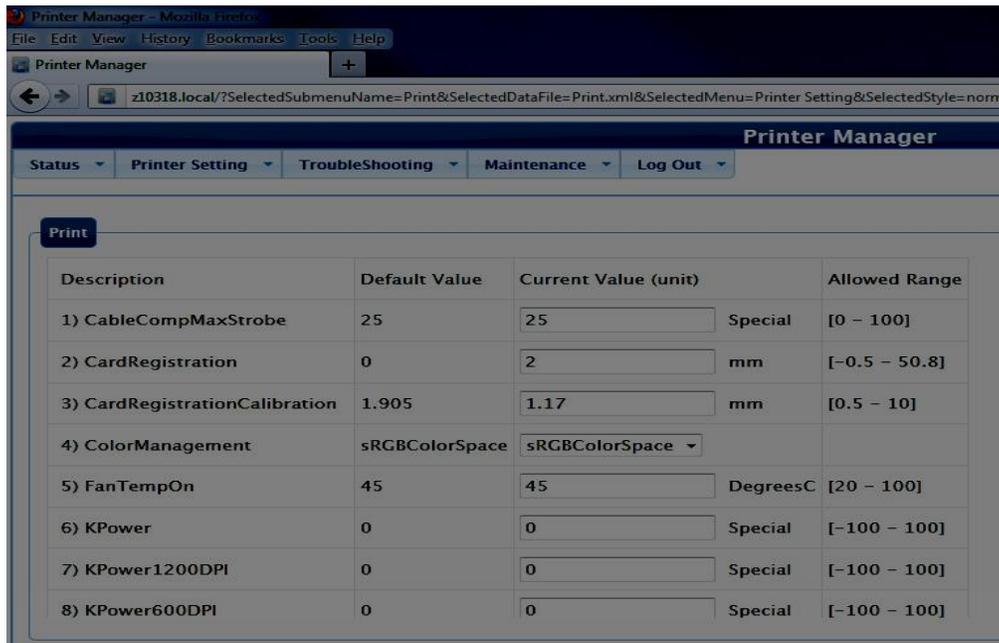

5. Scroll down to the bottom of the window. Click on **Set Current**.

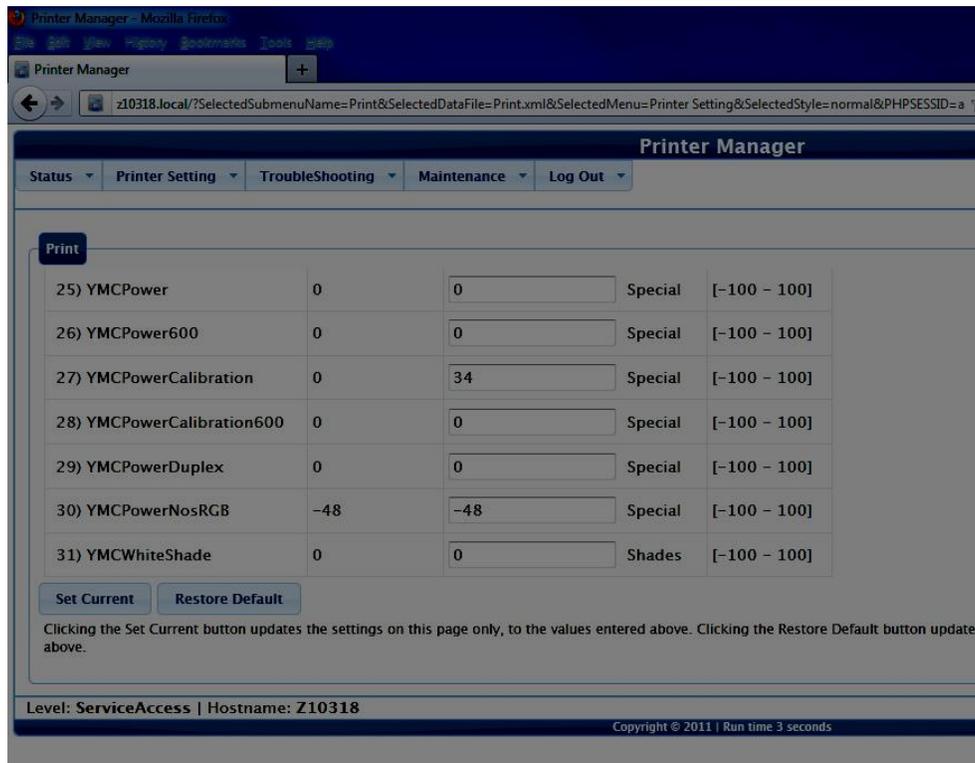

6. Your printer is now ready to print CR79 cards!

If you wish to print onto CR80 cards again, simply change the CardRegistration value back to '0'.